

IT6000 OPERATING INSTRUCTIONS

FACTORY SET CODE

Master Code 7-7-7-7-7-7

Manager Code 0-0-0-0

☆ Master Code needed to set User Code (User 3 ~ User 7).

OPENING THE LOCK

Single Code

- ⊙ Enter * User Code #.
- ⊙ The green LED light flashes and beeps twice for the entry of a valid code.
- ⊙ Within five (5) seconds, turn handle to the open position.

Dual Code

- ⊙ Enter * 1st Code # 2nd Code #.
- ⊙ The green LED light flashes and beeps twice for the entry of a valid code.
- ⊙ Within five (5) seconds, turn handle to the open position.

SETTING MODE

Setting Single Mode

- ⊙ Enter # Master Code # 0 # 0 #.
- ⊙ The green LED light flashes and beeps twice.

Setting Dual Mode - Any Users & Any Users (Including Master & Manager)

- ⊙ Enter # Master Code # 1 # 1 #.
- ⊙ The green LED light flashes and beeps twice.

Setting Dual Mode - Master & User

- ⊙ Enter # Master Code # 2 # 2 #.
- ⊙ The green LED light flashes and beeps twice.

Setting Dual Mode - Manager & User

- ⊙ Enter # Master Code # 2 # 2 #.
- ⊙ The green LED light flashes and beeps twice.

SETTING CODE

Setting User Code With Master Code / Manager Code

- ⊙ Enter # Master Code (or Manager Code) # (3~7) * New User Code # New User Code #.
- ⊙ The green LED light flashes and beeps twice.

Setting Manager Code With Master Code

- ⊙ Enter # Master Code # 2 * New Manager Code # New Manager Code #.
- ⊙ The green LED light flashes and beeps twice.

DELETING CODE

Deleting User Code With Master Code / Manager Code

- ⊙ Enter # Master Code (or Manager Code) # (3~7) * # #.
- ⊙ The green LED light flashes and beeps twice.

Deleting Manager Code With Master Code

- ⊙ Enter # Master Code # 2 * # #.
- ⊙ The green LED light flashes and beeps twice.

CHANGING USER CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ⊙ Enter # User Code # New User Code # New User Code #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Test the lock operation several times before closing the door.

CHANGING MANAGER CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ⊙ Enter # Manager Code # 2 * New Manager Code # New Manager Code #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Test the lock operation several times before closing the door.

CHANGING MASTER CODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ⊙ Enter # Master Code # 1 * New Master Code # New Master Code #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Test the lock operation several times before closing the door.

SETTING TIME DELAY

- ⊙ Enter # Master Code # 01~99 # 01~99 #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Time Delay starts and enters into Sleep Mode.
- ⊙ Press * or # to initiate Time Delay.
- ⊙ After the Time Delay Period, two minutes Open Period starts.

RELEASING TIME DELAY

- ⊙ Enter # Master Code # 00 # 00 #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Time Delay is released.

☆ The yellow LED light flashes once every 10 seconds during Time Delay and keep flashing in the last 10 seconds.

☆ The yellow LED light flashes twice every 10 seconds and beeps once during Open Period.

WRONG TRY PENALTY

- Entry of three (3) consecutive invalid codes starts a 5-minute freezing period.
- Entry of any codes will not be responded during the 5 minutes.
- **Valid Code Entry** – Double signal after valid code is entered.
- **Invalid Code Entry** – Triple signal and old code is still valid.

BATTERY LOW WARNING

- The green LED light turns into red during opening indicates that the battery is low and needs immediate replacement.
- Use four (4) 6-volt Alkaline Batteries. The replacement of the batteries at least once annually is recommended.

CHANGING YOUR BATTERY

1. Remove the lock case gently.
2. Take off the used batteries and connect four new 6-volt Alkaline batteries to the battery clip.
3. Install the lock case.
4. There will be a long beeping sound when changing the battery.
5. All the system will be checked automatically.

OVERRIDE CODE

Setting Override Code

- ⊙ Enter # * # Master Code # Override Code # Override Code #.
- ⊙ The green LED light flashes and beeps twice.

Using Override Code

- ⊙ Enter * # Override Code #.
- ⊙ The green LED light flashes and beeps twice.
- ⊙ Within five (5) seconds, turn handle to the open position.

☆ Once entering the Override Code, the Master Code will be reset to Factory Set Code automatically, all the other codes will be deleted.