


CHANGING THE BATTERY

This unit runs on a 9V alkaline battery. It is recommended that either 'Duracell' or 'Energizer' brands be used.

To change the battery, please refer to the diagram below.

- Simply slide the entry pad housing up and carefully pull it away from the mounting surface to expose the battery compartment.
- The battery connector is easily removed by unclipping it from the terminals on top of the battery. Care must be taken to ensure that the wires leading from the battery connector to the entry pad are not pulled out from the housing.
- Once the battery has been changed, carefully position the entry pad back over the mounting screws and slide the entry pad back into position. Ensure there are no wires or cables trapped between the entry pad and the safe door.

CHANGING
THE
BATTERY

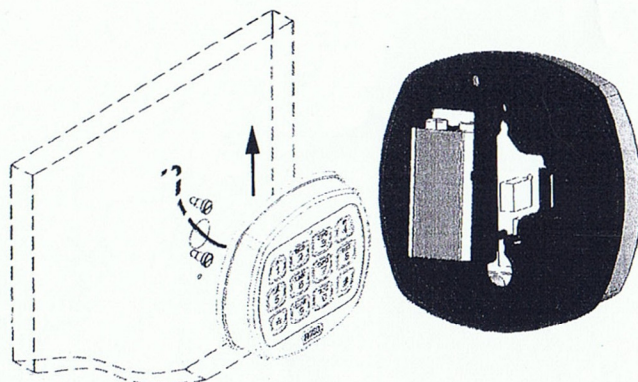

Specifications

Power Supply : DC 9V

Power Supply Range : DC 4.5 – 12V

Standby Current : < 15 mA

Active Current : < 20 mA

Battery Low Voltage : 5.2 +/- 0.2 V

Working Temperature : -25 °C ~ + 60 °C

Working Humidity : < 95%

Storage Temperature : - 45 °C ~ + 85 °C

Manager/User Code Length : 6 Digits

Distributor :-



AUSTRALIAN MADE

A.B.N. 23 003 454 458

ROSS

K.J.ROSS SECURITY LOCKS PTY.LTD.

Lock Manufacturer • Specialist in Safe & Vault Locks

 
29 Henderson Road, Knoxfield, Victoria 3180, Australia.

Telephone :- +61 3 9763 1796

Fax :- +61 3 9763 4223

Email :- rosslocks@rosslocks.com.au

Web :- www.rosslocks.com.au



ROSS

1000-SERIES ELECTRONIC COMBINATION SAFE LOCK



OPERATING INSTRUCTIONS

MANAGER STARTUP INSTRUCTIONS

- TO OPEN
FOR THE
FIRST TIME**
- Using the factory set manager code –
- Enter (**1 2 3 4 5 6**) 2 beeps sound.
 - The handle can now be turned to open the safe door.

Always perform the following instructions with safe door open.

- TO
CHANGE
THE
MANAGER
CODE**
- Enter (**0 0 0 0 0 0**) 2 beeps sound.
 - Enter the factory set manager code (**1 2 3 4 5 6**) 2 beeps sound.
 - Enter the new 6 digit manager code. 1 beep sounds.
 - To verify, re-enter the same manager code. 1 beep sounds.
 - Enter the new manager code to verify the new code has been accepted. 2 beeps sound.

- TO ADD
THE USER
CODE FOR
THE FIRST
TIME**
- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
 - Enter (**1**) 2 beeps sound.
 - Enter the 6 digit user code. 1 beep sounds.
 - To verify, re-enter the same user code. 1 beep sounds.
 - Enter the new user code to verify the new code has been accepted. 2 beeps sound.

MANAGER OPERATIONAL INSTRUCTIONS

Always perform the following instructions with safe door open.

- TO
CHANGE
THE USER
CODE**
- Enter (**0 0 0 0 0 0**) 2 beeps sound.
 - Enter the user code. 2 beeps sound.
 - Enter the new 6 digit user code. 1 beep sounds.
 - To verify, re-enter the same user code. 1 beep sounds.
 - Enter the new user code to verify the new code has been accepted. 2 beeps sound.

- TO
DISABLE
THE USER
CODE**
- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
 - Enter (**2**) 2 beeps sound.
 - Enter the user code to verify this code has been disabled.

- TO
ENABLE
THE USER
CODE**
- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
 - Enter (**1**) 2 beeps sound.
 - Enter the user code to verify this code has been enabled.

- TO
DELETE
THE USER
CODE**
- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
 - Enter (**3**) 2 beeps sound.
 - Enter the user code to verify this code has been deleted.
 - To re-enter the user code, follow the procedure, " To add the user code for the first time".

OPERATIONAL FEATURES

- STANDBY
MODE**
- There is a time limit of 15 seconds allocated to complete an instruction.
 - 2 beeps will sound to indicated you will need to re-start the instruction again.
-
- WRONG
ENTRY
PENALTY**
- If 4 consecutive invalid codes have been entered, a 5 minute delay period will be activated.
 - A beep, in intervals of 5 seconds, will sound until the time delay period has expired.
-
- AUTOMATIC
RE-LOCK**
- A re-lock will occur within 4 seconds.
-
- LOW
BATTERY
INDICATOR**
- If during the unlock cycle, a repeated beeping sound is detected, the battery is low and needs to be replaced.
 - It is recommended that either "Energizer" or "Duracell" brands be used.
 - To change the battery, please refer to the procedure, "Changing the battery".

USER OPERATIONAL INSTRUCTIONS

Always perform the following instructions with safe door open.

- CHANGE
THE USER
CODE**
- Enter (**0 0 0 0 0 0**) 2 beeps sound.
 - Enter the user code. 2 beeps sound.
 - Enter the new 6 digit user code. 1 beep sounds.
 - To verify, re-enter the same user code. 1 beep sounds.
 - Enter the new user code to verify the new code has been accepted. 2 beeps sound.